http://www.replacementdocs.com

SEGA SATURN™ VIRTUA STICK™

Thank you for your purchase of the Sega Saturn Virtua Stick. Please read the following instructions carefully before use.

MAINTAINING YOUR SEGA SATURN VIRTUA STICK

LOCATION

Avoid the following conditions during use or storage:

- high temperatures, such as in direct sunlight or near a heater;
- extreme cold;
- steam vapor, such as near a kitchen stove;
- dust;
- areas where the unit may be splashed with water;
- humidity;
- slanted, unstable or vibrating surfaces.

Note: Condensation may accumulate on the surface of the unit if it is subjected to sudden changes in temperature. In this case, allow the unit to rest for about an hour before use.

CONSOLE

- Never disassemble or alter the console or any other components.
- Avoid shocks, such as impact from dropping the unit on the floor.
- Use water or diluted neutral detergent to clean the product. Do not use benzene or thinner.

CABLE

- Do not forcibly bend or pull the cable.
- Do not place heavy objects on the cable.
- Hold the plug in your hand while removing the cable.

Caution: If the cable becomes damaged, and the core wires become exposed, stop using the Sega Saturn Virtua Stick immediately and contact our customer service department or your Sega dealer. Continued use constitutes a risk of electric shock or fire.

USAGE ENVIRONMENT

Use this product under the following conditions:

- Temperature—41°F to 95°F (5°C to 35°C)
- Humidity—20% to 80% RH

IF YOU WOULD LIKE TECHNICAL ASSISTANCE WITH ANY SEGA PRODUCT, PLEASE CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-USA-SEGA.

Sega, Sega Saturn and Virtua Stick are trademarks of SEGA.
© 1995, SEGA, P.O. Box 8097, Redwood City, CA 94063.

<670-6559B>

OPERATING THE SEGA SATURN VIRTUA STICK

Connect the Sega Saturn Virtua Stick to Control Port 1 on the Sega Saturn. For two-player games, connect a second Sega Saturn Virtua Stick to Control Port 2.

Caution: Make sure the power is off before connecting.

Note: Button functions vary with each game. See the game's instruction manual for details.

Continuous Speed Adjustment Button
Adjusts the continuous shooting speed.
Slide to the right to increase the speed.

Joy Stick
Works in the same way as the Directional Pad on a standard Control Pad.

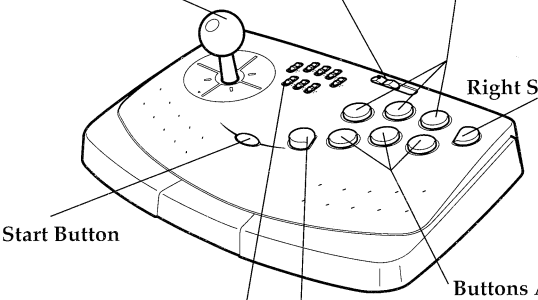

Continuous Shooting Switch
Switch on for continuous shooting.
Press and hold down the appropriate button.